



makes a difference

Using your Pressure Washer with an alternative water source

The full range of Kärcher domestic Pressure Washers can be used to draw water from an alternative water source; such as a water butt

K3, K4 K5, K6 and K7 series machines

With the use of a suction hose and filter the pressure washer will be able to draw water from an alternative water source. You will require the suction hose and filter kit (Part number 44402380).




K2 Machines

The suction hose and filter it is not compatible with the K2 series of machine. This is because the motor is not powerful enough to draw the water.

However

If you raise your water butt 18 inches off of the ground (see picture below) you will be able to draw the water into the machine. In order to do this you will need to attach your garden hose to the tap on the water butt. Gravity will feed the water through the hose and into the machine. This hose should be as short as possible.

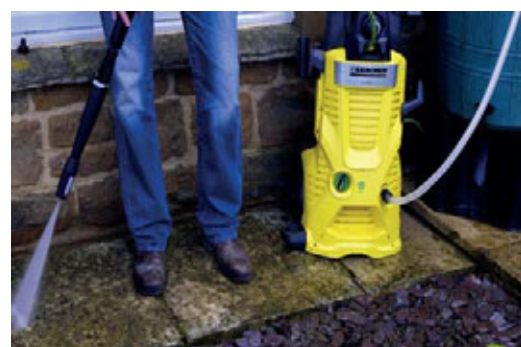

The Kärcher Home & Garden Helpline Team