

DRAPER[®]

INSTRUCTIONS FOR 10L 1000W 230V Wet & Dry Vacuum Cleaner

Stock No.06489

Part No.WDV10

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



DRAPER[®]

GENERAL INFORMATION

Read all these instructions before operating this product and save these instructions.

This manual has been compiled by Draper Tools and is an integrated part of the product with which it is enclosed and should be kept with it for future references.

This manual describes the purpose for which the product has been designed and contains all the necessary information to ensure its correct and safe use. We recommend that this manual is read before any operation or, before performing any kind of adjustment to the product and prior to any maintenance tasks. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.



CONTENTS

Contents/Guarantee 1

Specification..... 2

Power supply..... 3

General safety instructions 4

Getting to know your vacuum cleaner 5

Assembly 6

Operation and use..... 7-11

Maintenance 12-14

Troubleshooting/Disposal 15

Optional accessories/Explanation of symbols/pictograms 16

Declaration enclosed



GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF, England. Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that a fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. The guarantee period covering parts/labour is 12 months from the date of purchase. The guarantee is extended to 24 months for parts only. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agents.

Note: If the tool is found not to be within the Terms of Warranty, repair and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

Note: This tool is intended for domestic use only.



SPECIFICATION

The Draper Tools policy of continuous improvement determines the right to change specification without notice.

Stock no.	06489
Part no.	WDV10
Rated voltage	230V~50Hz
Rated input	1000W
Vacuum pressure	11kpa
Air flow	30L/sec
Dust bag capacity	10L
Filtration stage	Cloth filter
Sound pressure level	82dB(A)
Sound power level	96dB(A)
Weight (excluding accessories)	3.8kg

CAUTION: Risk of electric shock. Do not open.

This appliance is supplied with a moulded 3 pin mains plug for your safety. The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, ensure the substitute is of the correct rating, approved to BS1362 and ASTA or BS Kite marked.

ASTA 
BSI 

The fuse cover is removable with a small plain slot screwdriver. Ensure the fuse cover is replaced before attempting to connect the plug to an electrical outlet. If the cover is missing, a replacement must be obtained or the plug replaced with a suitable type.


If a replacement plug is to be fitted this must be carried out by a qualified electrician.

The damaged or incomplete plug, when cut from the cable shall be disabled to prevent connection to a live electrical outlet.

This appliance is Class II[†] and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If an extension lead is required, use an approved and compatible lead rated for this appliance.

Follow all the instruction supplied with the extension lead.

[†]Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

IMPORTANT:

On products exceeding 2000W it is recommended that the power cable and/or extension cable are fully unwound before a connection is made to the power supply. However, ensure the residual cable does not pose a trip hazard

For safe operation of this appliance it should be supplied via a residual current device (RCD) with a tripping current of not more than 30mA.

General Safety Warnings

WARNING: When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury including the following.

Read all these instructions before attempting to operate this product and save these instructions.

Safe operation

1. Keep work area clear

- Cluttered areas and benches invite injuries.

2. Consider work area environment

- Do not expose tools to rain.
- Do not use tools in damp or wet locations.
- Keep work area well lit.
- Do not use tools in the presence of flammable liquids or gases.

3. Guard against electric shock

- Avoid body contact with earthed or grounded surfaces (e.g. pipes, radiators, ranges, refrigerators).

4. Keep other persons away

- Do not let persons, especially children, not involved in the work touch the tool or the extension cord and keep them away from the work area.

5. Store idle tools

- When not in use, tool should be stored in a dry locked-up place, out of reach of children.

6. Do not force the tool

- It will do the job better and safer at the rate for which it was intended.

7. Use the right tool

- Do not force tools to do the job of a heavy duty tool.
- Do not use tools for purposes not intended; for example do not use circular saws to cut tree limbs or logs.

8. Dress properly

- Do not wear loose clothing or jewellery, they can be caught in moving parts.
- Non-skid footwear is recommended when working outdoors.
- Wear protective hair covering to contain long hair.

9. Use protective equipment

- Use safety glasses.
- Use face or dust mask if working operations create dust.

10. Connect dust extraction equipment

- If the tool is provided for the connection of dust extraction and collecting equipment, ensure these are connected and properly used.

11. Do not abuse the cord

- Never yank the cord to disconnect it from the socket. Keep the cord away from heat, oil and sharp edges.

12. Secure work

- Where possible use clamps or a vice to hold the work. It is safer than using your hand.

13. Do not overreach

- Keep proper footing and balance at all times.

14. Maintain tools with care

- Keep cutting tools sharp and clean for better and safer performance.

- Follow instruction for lubricating and changing accessories.
- Inspect tool cords periodically and if damaged have them repaired by an authorised service facility.
- Inspect extension cords periodically and replace if damaged.
- Keep handles dry, clean and free from oil and grease.

15. Disconnect tools

- When not in use, before servicing and when changing accessories such as blades, bits and cutters, disconnect tools from the power supply.

16. Remove adjusting keys and wrenches

- Form the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

17. Avoid unintentional starting

- Ensure switch is in "off" position when plugging in.

18. Use outdoor extension leads

- When the tool is used outdoors, use only extension cords intended for outdoor use and so marked.

19. Stay alert

- Watch what you are doing, use common sense and do not operate the tool when you are tired.

20. Check damaged parts

- Before further use of tool, it should be carefully checked to determine that it will operate properly and perform its intended function.
- Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation.
- A guard or other part that is damaged should be properly repaired or replaced by an authorised service centre unless otherwise indicated in this instruction manual.
- Have defective switches replaced by an authorized service centre.
- Do not use the tool if the switch does not turn it on and off.

21. Warning

- The use of any accessory or attachment other than one recommended in this instruction manual may present a risk of personal injury.

22. Have your tool repaired by a qualified person

- This electric tool complies with the relevant safety rules. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

23. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



- | | | |
|-----------------------|--------------------------|------------------------------------|
| ① Vac assembly. | ⑧ Extension wands. | ⑮ Accessory storage. |
| ② 1.5M hose. | ⑨ Washable cloth filter. | ⑯ Handle. |
| ③ Foam filter. | ⑩ Power switch. | ⑰ 6 Piece detail car cleaning kit. |
| ④ Round dusting brush | ⑪ Blower port. | ⑱ Adaptor for detail cleaning kit. |
| ⑤ Utility nozzle. | ⑫ Vacuum port. | ⑱ Carrying strap. |
| ⑥ Car nozzle. | ⑬ Container. | |
| ⑦ Crevice tool. | ⑭ Latch. | |

- **UNPACKING:** After removing the packing material, make sure the product is in perfect condition and that there are no visible damaged parts. If in doubt, do not use the vacuum cleaner and contact the dealer from whom it was purchased.

The packaging materials (plastic bags, polystyrene etc.), must be disposed of in an appropriate refuse collection container. These materials must not be left within the reach of children as they are potential sources of danger.

- **WARNING:** Do not plug in power cord to power outlet, make sure plug is **disconnected before assembling the wet/dry vac.**
- **UNPACKING YOUR WET/DRY VACUUM & GENERAL ASSEMBLY (Figs.1.-4.):**
Verify that the power cord is disconnected from the outlet.

Undo latches on both sides.

Lift the power head off of the container.

Remove the contents from inside the container, make sure you have all contents as listed on page 5.

FIG.1



FIG.2



FIG.3



FIG.4



- **DRY VACUUMING (Figs.5.-8.):**

- **WARNING:** Be sure to read, understand, and apply information, entitled 'safety instructions & warnings'. Do not vacuum in areas with flammable gases, vapours, or explosive dusts in the air. Flammable gases or vapours include but are not limited to; lighter fluid, solvent type cleaners, oil-base paints, gasoline, alcohol or aerosol sprays. Explosive dusts include but are not limited to; coal, magnesium, grain or gun powder. To reduce the risk of health hazards from vapours or dust, do not vacuum toxic materials.

Verify that the power cord is disconnected from the outlet.

In order to prepare your vacuum for dry vacuuming, verify that the cartridge filter is securely mounted.

Make sure the filter is pushed in until it stops against the power head.

Place the power head back on the container, aligning the top section with the latches, and snap into place.

Insert the locking end of the hose into the port of the container and lock in to place.

FIG.5

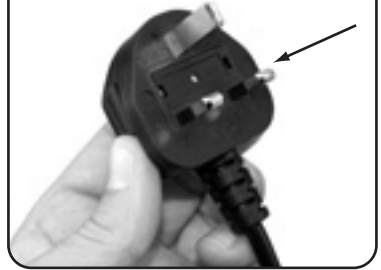 


FIG.6

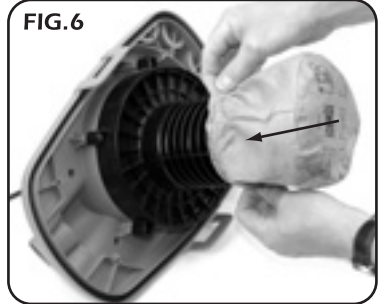 


FIG.7



FIG.8

 


- **OPERATING INSTRUCTIONS: DRY VACUUMING (Figs. 9.-11.):**

Push the required attachment onto the free end of the hose or extension.



Plug in the power cord into the outlet.

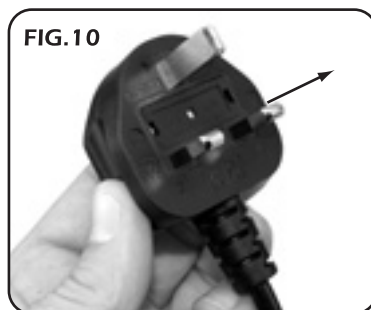

Turn the motor on by flipping the switch to the 'I' ON position.

Once you have completed vacuuming, flip the switch to the 'O' OFF position and unplug the power cord from the outlet.

IMPORTANT: Do not use the reusable cloth filter for liquid vacuuming.



- **WET VACUUMING (Figs.12.-15.):**
- **WARNING:** Be sure to read, understand, and apply information, entitled 'safety instructions & warnings'. Do not vacuum in areas with flammable gases, vapours, or explosive dusts in the air. Flammable gases or vapours include but are not limited to; lighter fluid, solvent type cleaners, oil-base paints, gasoline, alcohol or aerosol sprays. Explosive dusts include but are not limited to; coal, magnesium, grain or gun powder. To reduce the risk of health hazards from vapours or dust, do not vacuum toxic materials.

Verify that the power cord is disconnected from the outlet.

In order to prepare your vacuum for wet vacuuming, verify that the cartridge filter is securely mounted.

Make sure the filter is pushed in until it stops against the power head.

Place the power head back on the container, aligning the top section with the latches, and snap into place.

Insert the locking end of the hose into the port of the container and lock in to place.

FIG. 12

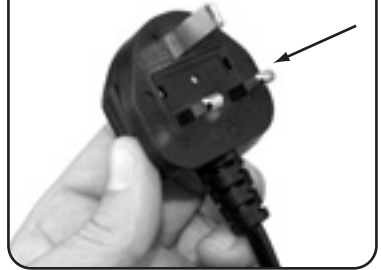 


FIG. 13

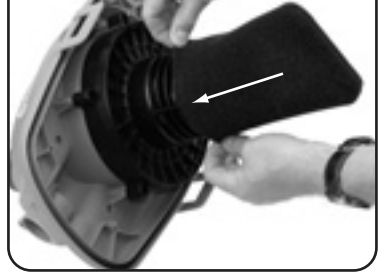 


FIG. 14



FIG. 15



- **OPERATING INSTRUCTIONS: WET VACUUMING (Figs. 16.-18.):**


Push the required attachment onto the free end of the hose or extension.

FIG. 16



Plug in the power cord into the outlet.

 FIG. 17

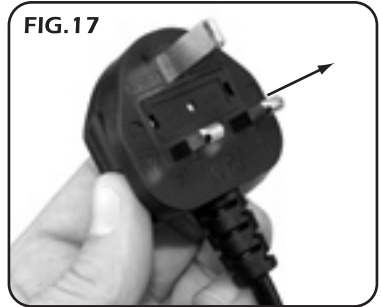

Turn the motor on by flipping the switch to the 'I' ON position.

Once you have completed vacuuming, flip the switch to the 'O' OFF position and unplug the power cord from the outlet.

FIG. 18



After use, empty the container, clean and dry the inside and outside before storage.

IMPORTANT: The foam filter must be removed after wet vacuuming, and a reusable cloth filter must be installed before dry vacuuming again.

- **BLOWING (Figs.19.-22.):**

This Wet/Dry Vac has blowing capabilities. To use the blower feature follow the instructions listed.

- **WARNING:** Always wear safety goggles before using blower.
- **WARNING:** Keep bystanders clear from blowing debris.
- **WARNING:** Wear a dust mask if blowing creates dust that might be inhaled.

Verify that the power cord is disconnected from the outlet.

Make sure the container is empty before using as a blower.

Remove hose from the vacuum port.

Insert the larger end of the hose into the blowing port on the back side of the power head.

Fit the desired attachment to the hose.

Ensure the power switch is turned off and plug into the power supply.

Before turning on the vac, firmly hold loose end of the hose. Turn the motor on by flipping the switch to the 'I' ON position.

FIG.19

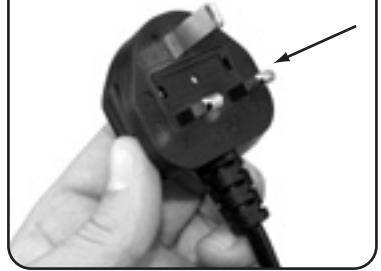 


FIG.20



FIG.21



FIG.22



- **IMPORTANT:** Clean or change the dust filter regularly for best performance. ALWAYS USE DUST FILTER FOR DRY VACUUMING. If the machine is used without the dust filter, the motor will burn out and the warranty will be voided. Always keep spare filters on-hand.

- **NOTE:** The filter included is made of high quality material designed to stop small dust particles. The filter should be used for dry pick-up only. A dry filter is necessary to pick up dust.

If the dust filter is wet, it will clog quickly and be very difficult to clean. Handle the filter carefully when removing it for cleaning and replacing it. Check the filters for tears or small holes, a small hole can let dust pass through and out of the cleaner. Do not use a filter with holes or tears, replace it immediately.

Verify that the power cord is disconnected from the outlet.

Disconnect the hose from the vacuum. (fig.2)

Undo the latches and remove the power head from the container. (fig.3)

Clear all dirt or debris from the container and hose. (fig.4).

Clean or replace the filters.

Check the hose, attachments, and power cord to verify that they have not been damaged.

- **WARNING:** Always disconnect the plug from the power outlet before removing the power head from container.

FIG.23



FIG.24



FIG.25



FIG.26



- INSTALLING & CLEANING REUSABLE CLOTH FILTER:

- Installing Reusable Cloth Filter (Figs.27.-30.):

Verify that the power cord is disconnected from the outlet.

Remove power head and place in upside down position.

Slide reusable cloth filter down over the filter cage making sure the whole cage is covered.

Replace the power head on to the container.

FIG.27

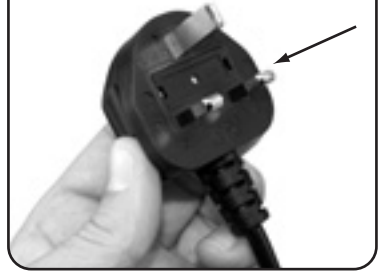 


FIG.28



FIG.29



- Removing and Cleaning Reusable Cloth Filter (Fig.30.):

With the removed power head in the upside down position.

Carefully remove the reusable cloth filter from the filter cage. Clean the filter by gently tapping or brushing dirt off. Cleaning should not be done indoors in living areas.

Use a mild soap and water solution to wash reusable cloth filter and rinse with clean water.

Allow the wet filter to air dry for 24 hours before installing onto the filter cage.

FIG.30



- **INSTALLING & CLEANING FOAM SLEEVE FILTER**

- **Installing Foam Sleeve Filter (Figs.31.-33.):**

Verify that the power cord is disconnected from the outlet.

Remove power head and place in upside down position. Follow instructions to remove cloth filter.

Carefully slide foam sleeve filter down over the filter cage making sure the whole cage is covered.

Replace the power head on to the container.

FIG.31

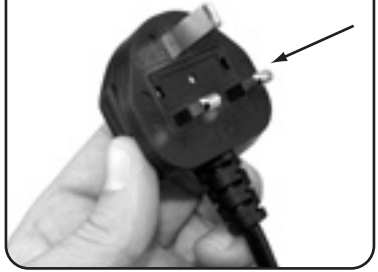 


FIG.32



FIG.33



- **Cleaning Foam Sleeve Filter (Fig.34.):**

With the removed power head in the upside down position, carefully remove foam sleeve filter.

Use a mild soap and water solution to wash foam sleeve filter and rinse with clean water.

Allow filter to air dry before installing and using again.

FIG.34



TROUBLESHOOTING

- **WARNING:** To reduce the risk of electric shock-unplug before troubleshooting.

Symptom	Possible Causes	Corrective Action
Vacuum will not operate	1. No power supply.	1. Check power supply - cord, breakers, fuses.
	2. Faulty power cord.	2. Unplug and check the power cord. If damaged, have it repaired by a professional.
	3. Container full.	3. Empty container.
Dust comes from motor cover.	1. The reusable cloth filter is missing or damaged.	1. Attach or replace the reusable cloth filter.
Reduced efficiency and motor/speed vibration.	1. There is a blockage in the nozzle, hose, or the vacuum inlets. Or the dust filter is blocked by fine dust.	1. Check nozzle, hose and inlets for blockage. Take off the filter and clean it. Or install new filter.

DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE* as unsorted municipal waste.



* Waste Electrical & Electronic Equipment.

Stock No.	Part No.	Description
06946	AVC86	Crevice tool.
06948	AVC87	Round brush.
06949	AVC88	Hose 1.5M.
06950	AVC89	Foam filter.
06951	AVC90	Cloth filter.
06952	AVC91	Car nozzle.
06953	AVC92	Utility nozzle.
06954	AVC93	Plastic extension tube set.
06955	AVC94	Keyboard nozzle set.



Do not dispose of WEEE*
as unsorted municipal waste.



Class II construction
(Double insulated).



For indoor use.
Do not expose to rain.

* Waste Electrical & Electronic Equipment.

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.

- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Internet:** www.draper.co.uk
- **E-mail:** sales@drapertools.com
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355

- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs, please
contact the Draper Tools Helpline for details of an
agent in your local area.

YOUR DRAPER STOCKIST

DKKC310511

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.