

Gazebos

Stock No.76940, 76941, 76942.

Part No.GAZ2, GAZ3, GAZ4.

INSTRUCTIONS

02/2009


- **Important** - Do not use this gazebo in high winds or extreme weather conditions. This gazebo must be erected by two people.

1. Place the gazebo upright in the centre of the area in which you wish to erect the gazebo. With a 2nd person located on the opposite corner, lift the gazebo for clearance and walk backwards to extend the frame. To improve the opening and closing action spray some silicone lubricant on the outer legs.

Note - Take care not to pinch fingers in the sliding parts.



2. To lock the gazebo in place, grip the supporting leg and push the sliding mount upwards. Push the locking button in. Once the hole in the sliding mount is over the pin, it will pop out locking the upper frame in place.

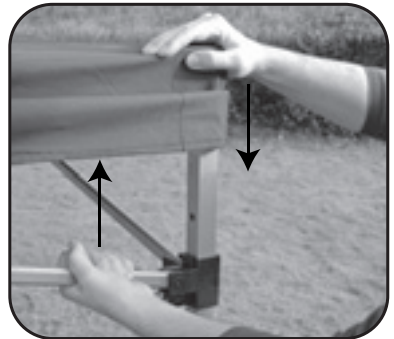

DRAPER[®]

Gazebos

Stock No.76940, 76941, 76942.

Part No.GAZ2, GAZ3, GAZ4.

INSTRUCTIONS

02/2009

3. Extend each leg by sliding out the lower section.
Each leg will lock into place when fully extended.

4. This gazebo can be secured to the ground by passing a peg through the hole in the foot which is located at the end of each leg, or by securing using guy ropes supplied.

