


# DUAL ACTION AIR SANDER

## 83942 - DAT-DAS SPARE PARTS LISTING

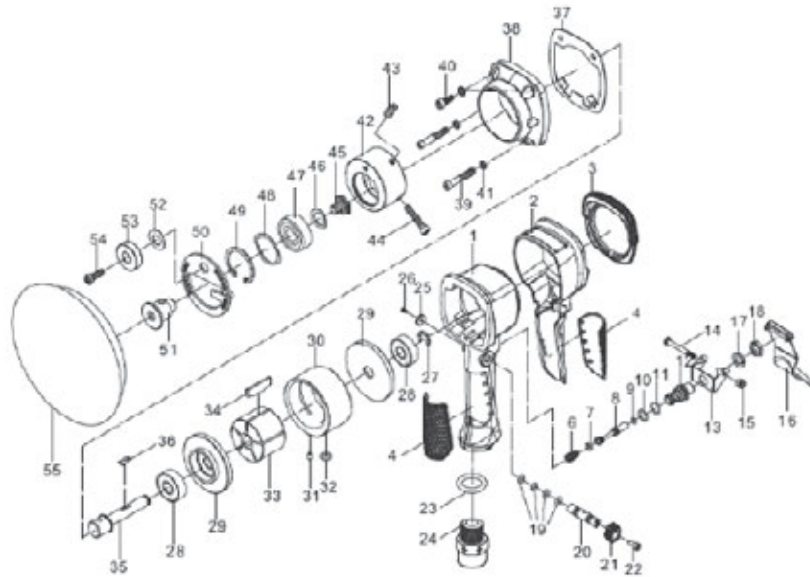

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YDAT-DAS-1	00274	Housing
2	YDAT-DAS-2	00275	Housing Cover
3	YDAT-DAS-3	00276	Top Cover
4	YDAT-DAS-4	00277	Soft Grip
6	YDAT-DAS-6	00279	Spring
7	YDAT-DAS-7	00280	O-Ring
8	YDAT-DAS-8	00281	Valve Stem
9	YDAT-DAS-9	00282	O-Ring
10	YDAT-DAS-10	00283	O-Ring
11	YDAT-DAS-11	00284	O-Ring
12	YDAT-DAS-12	00285	Valve Seat
13	YDAT-DAS-13	00287	Trigger Seat
14	YDAT-DAS-14	00288	Screw
15	YDAT-DAS-15	00289	Nut
16	YDAT-DAS-16	00290	Trigger Seat
17	YDAT-DAS-17	00291	Washer
18	YDAT-DAS-18	00292	Nut
19	YDAT-DAS-19	00293	O-Ring
20	YDAT-DAS-20	00294	Air Regulator
21	YDAT-DAS-21	00295	Air Regulator Dial
22	YDAT-DAS-22	00296	Screw
23	YDAT-DAS-23	00297	O-Ring
24	YDAT-DAS-24	00298	Air Inlet
25	YDAT-DAS-25	00299	Washer
26	YDAT-DAS-26	00300	Screw
27	YDAT-DAS-27	00301	E-Ring
28	YDAT-DAS-28	00302	Bearing

KEY No.	PART No.	STOCK No.	DESCRIPTION
29	YDAT-DAS-29	00303	Front/End Cover
30	YDAT-DAS-30	00304	Cylinder
31	YDAT-DAS-31	00305	Set Pin
32	YDAT-DAS-32	00306	O-Ring
33	YDAT-DAS-33	00307	Rotor
34	YDAT-DAS-34	00308	Rotor Blade
35	YDAT-DAS-35	00310	Work Spindle
36	YDAT-DAS-36	00311	Semi-Round Key
37	YDAT-DAS-37	00312	Gasket
38	YDAT-DAS-38	00313	Front Cover
39	YDAT-DAS-39	00314	Set Screw
40	YDAT-DAS-40	00315	Set Screw
41	YDAT-DAS-41	00316	Washer
42	YDAT-DAS-42	00317	Accepter
43	YDAT-DAS-43	00318	Screw
44	YDAT-DAS-44	00319	Set Screw
45	YDAT-DAS-45	00320	Set Screw
46	YDAT-DAS-46	00321	Washer
47	YDAT-DAS-47	00322	Bearing
48	YDAT-DAS-48	00323	Washer
49	YDAT-DAS-49	00324	E-Ring
50	YDAT-DAS-50	00325	Set Plate
51	YDAT-DAS-51	00326	Bearing Seat
52	YDAT-DAS-52	00327	Washer
53	YDAT-DAS-53	00329	Lever
54	YDAT-DAS-54	00330	Screw
55	YDAT-DAS-55	00331	Sanding Pad