

# BANDSAW STAND

## 99270 - ABS11A ASSEMBLY INSTRUCTIONS

### UNPACKING & CHECKING


Carefully remove the stand from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears at the bottom of this page) and do not attempt to use the stand.

The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

**Warning!** Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children. If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

### WHAT'S IN THE BOX?

- ① 4x Leg upright.
- ② 2x Side support bracket - short.
- ③ 2x Side support bracket - long.
- ④ 8 x M6x12mm screw, 8 x 6.5mm, washer 8 x M6 nuts.
- ⑤ 8 x M8x12mm, 8 x 8.5mm washers.

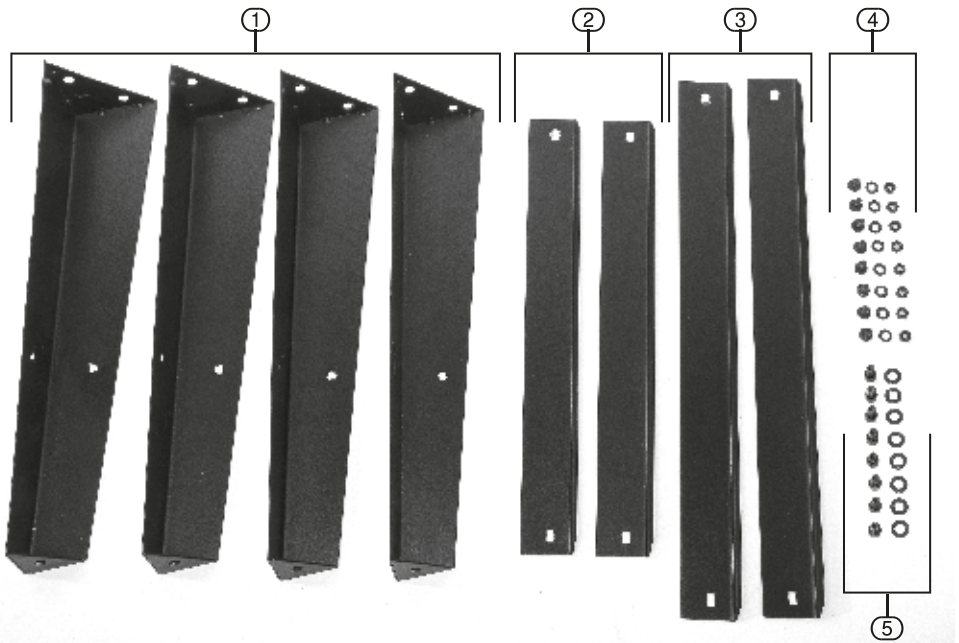

### ASSEMBLY

The Bandsaw Stand should be used if not securing directly to a workbench.

Holes are provided in the machine's base plate for this purpose.

The stand legs ① can be secured to the bandsaw with fixings ⑤ as shown in FIG.1.

Using fastenings ④, assemble the support bracket ②&③ to the legs ① as shown in FIG.2.

**Warning:** The supporting surface where the bandsaw is mounted should be examined carefully after mounting to ensure that no movement during use can result. If any tipping or walking is noted, secure the workbench or supporting surface before operating the bandsaw.

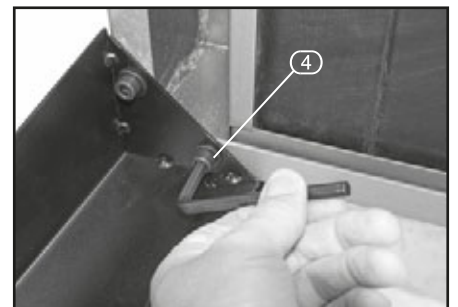


FIG.1

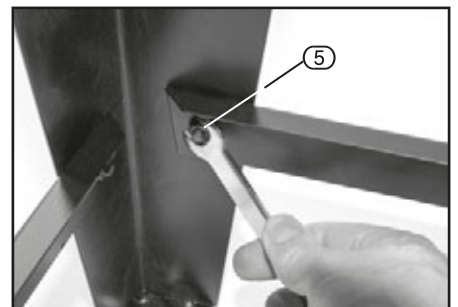


FIG.2