



INSTRUCTIONS FOR  
**TORQUE SCREWDRIVER 2-10NM**  
 MODEL NO: **STS100**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

**1. SAFETY**

- ✓ Ensure all workshop safety rules, regulations and conditions are complied with when using this tool.
- ✓ Maintain the screwdriver in good condition.
- ✓ The screwdriver is a precision tool, **DO NOT** drop it or abuse it.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ☐ **WARNING! DO NOT** use the screwdriver if damaged or thought to be faulty.
- ✓ After use adjust to lowest torque setting (but not below), clean and store in a safe, dry, childproof location.

**2. INTRODUCTION**

34pc 1/4" Sq Drive Torque Screwdriver Set 2-10Nm. One of a comprehensive range of Premier Hand Tools, suitable for daily professional use. Ideal for automotive based applications including replacement of airbag, crash sensor and inertia reel fixtures. Robust construction with easy-to-read window for precise torque setting. Includes popular size bits and adaptor. Textured, contoured handle for added grip and comfort. Supplied in storage case.

**3. SPECIFICATION**

Drive: ..... 1/4" Sq.  
 Range: ..... 2-10 Nm  
 Length: ..... 240mm  
 Contents ..... 34pc  
 Bits; Slotted - 3, 4, 5, 6, 7mm, Phillips - #0, #1 x 2, #2 x 3, #3 x 2, Pozi - #1 x 2, #2 x 3, #3 x 2, TRX-Star\* - T10, T15, T20, T25, T30, T40, Hex - 2, 2.5, 3, 4, 5, 6mm, 1/4"Sq Drive Torque Driver, 1/4"Sq x 1/4"Hex Adaptor

**4. OPERATION**

- 4.1. Hold screwdriver in one hand, and using other hand, hold and pull out adjusting ring at rear of screwdriver. Turn clockwise to increase setting or anti-clockwise to decrease setting, until required torque is shown on the scale (red line marks setting). Release adjusting ring and ensure it is fully pushed back into place.
- 4.2. When tightening the screw, nut or bolt, you will feel and hear the mechanism click when the set torque is reached. Immediately stop applying force to the screwdriver to avoid overtightening



**ENVIRONMENT PROTECTION**  
 Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.  
**Important:** No Liability is accepted for incorrect use of this product.  
**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR**

01284 757500  
 01284 703534  
 sales@sealey.co.uk  
 www.sealey.co.uk