


**STAIR/B - SPARE PARTS DIAGRAM**

**V4.0 01/2006**

Please use only Trend original spare parts.

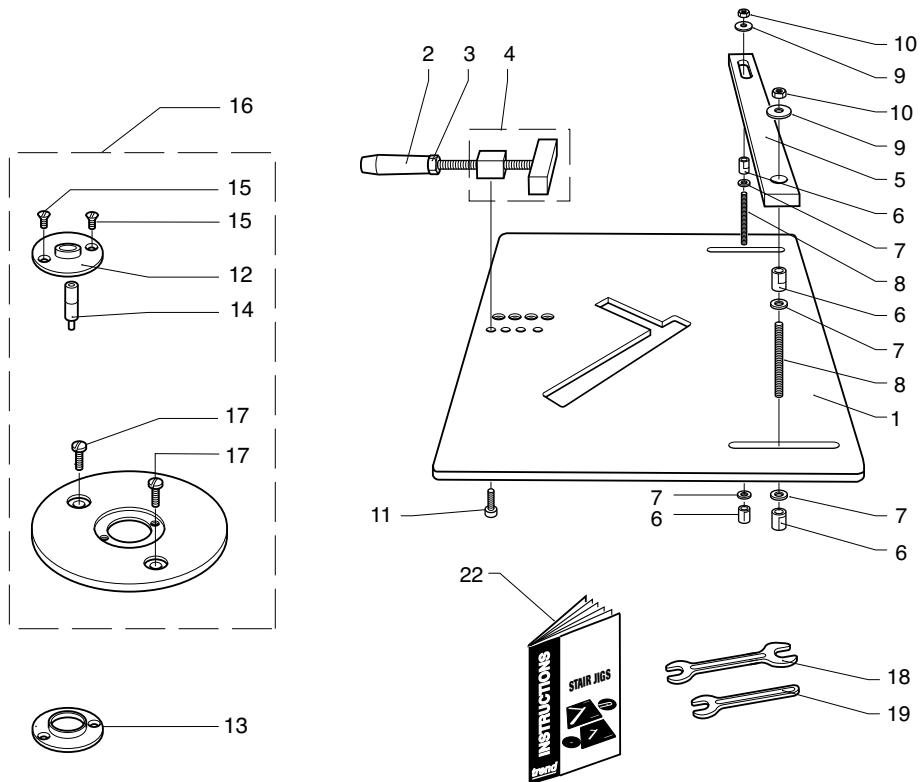

<b>STAIR/B - SPARE PARTS LIST</b>			<b>V4.0 01/2006</b>
<b>No.</b>	<b>Qty.</b>	<b>Desc.</b>	<b>Ref.</b>
1	1	Main Board for STAIR/B	WP-SJB/01
2	1	Handle for Clamp Plastic M12	WP-SJ/02
3	1	Nut Hex M12	WP-NUT/12
4	1	Clamp Assembly	WP-SJ/04
5	1	Aluminium Clamp Bar	WP-SJ/05
6	4	Nut Barrel M8	WP-SJ/06
7	4	Washer M8	WP-WASH/15
8	2	Stud M8 x 75mm	WP-SJ/08
9	2	Washer M8 x 25mm	WP-WASH/17
10	2	Nut Hex M8	WP-NUT/08
11	1	Machine Screw Cheese M8 x 10mm Slot	WP-SCW/39
12	1	Line up Bush 16mm Dia.	UNI/GB16
13	1	Guide Bush 24mm Dia	GB24
14	1	Line-up Pin 1/2"	UNI/PIN/1
15	2	Machine Screw Csk 2BA x 1/4" Slot	WP-SCW/01
16	0	Circular Sub-base Complete	GB/5
17	2	Machine Screw Pan M6 x 16mm Slot	WP-SCW/27
18	1	Spanner 10mm/13mm A/F	SPAN/1013
19	1	Spanner 13mm A/F	SPAN/13
20	1	Manual	MANU/SJ