


**STC
HW**

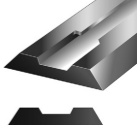

PLANER BLADES PB/29 TO SUIT:

Make	Model Refs.
AEG (ATLAS COPCO)	EH82, EH82.1, EH700, EH822, H750, H500, EH3-82, EH800, EH450
BLACK & DECKER	BD710, DN710, DN720, BD711, KW712, KW713, KW725, BD713, BD725
BOSCH	PHO2-82, PHO3-82/B, PHO15-82, PHO16-82, PHO25-82, PHO30-82, PHO100, PHO150, PHO200, PH300, 1592-9, GHO282, GH31-82, GHO36-82C
CASALS	CE82, CE98ACE
DEWALT	DW677, DW678K, DW678EK, DW680, D26500, D26501
DRAPER	PT682, P882
FELISATTI	TP282
FERM	FP82
FREUD	FE82, FE82VCE
HAFFNER	FH224
HITACHI	F20, FU20 , P20V, P20SA
HOLZ-HER	2321, 2321-S, 2322, 2223 (NEW)
MAFELL	EHU82, MHU82, MHU82S, MHU82D
MAKITA	M102, 1900, 1900B, 1901, 1125, 1100, 1923B, 1923BD, 1923H, 1902
METABO	EXPERT, 4382, HO0882, HO8382
NUTOOL	NPT82
PERLES	SK82A
PEUGEOT	RA82CS, RA400, RA3/82
SKIL	92H, 94H, 95H, 96H, 97H
RYOBI	L282, L1323A , HL-82, L-1835, L180, GH014, EPN-7582
WOLF/KANGO	8614, 8057, 8108

Model Refs. in **bold** indicate these planers need PB/CK/119 Conversion Kit

INTENDED USE

This planer blade set is intended to be used in a portable power planer to cut wood and wood based material.

INSTRUCTIONS

Unplug machine when fitting blades or undertaking any maintenance. Never use dull blades. Always refer to manufacturers instructions when making adjustments and when using power planers.

Fitting Reversible Blades:


1. Undo securing bolts half to one turn & slide out blade.
2. Fit new blade & push blade back into its correct seating position.
3. Check side clearance & tighten securing bolts.
4. Check blades are level to back shoe of planer.
5. Re-check tightness of securing bolts.
6. Rotate block to ensure blades do not foul.



Trend Machinery & Cutting Tools Ltd.

Technical Support: 0044(0)1923 224681
technical@trendm.co.uk
www.trend-uk.com

C/PB/29 v1.0

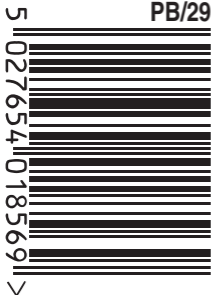

trend[®]
routing technology