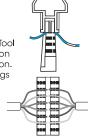Join telephone or network cable together. Suitable for joining 2, 3 and 4 pair telephone or network cables

1.Remove clip-on cover and attach socket to wall with 4 screws (not supplied).

2.Carefully strip about 30mm of outer sheath from each cable to be joined. Use an IDC Connecting Tool (not supplied) to press the wires into the connection slots as shown, there is no need to remove insulation. Match individual wires of the same colour/markings from each cable opposite each other in the two connection strips, as shown below.

3. Cut out suitable cable entry points in the cover and clip the cover back on.

PHILEX

Customer Careline: **08457 573 479 (Local Rate - UK Only)**

Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

Technical Support:
www.slxtechnology.com/support