


## BATH FRONT AND END PANEL FIXING INSTRUCTIONS

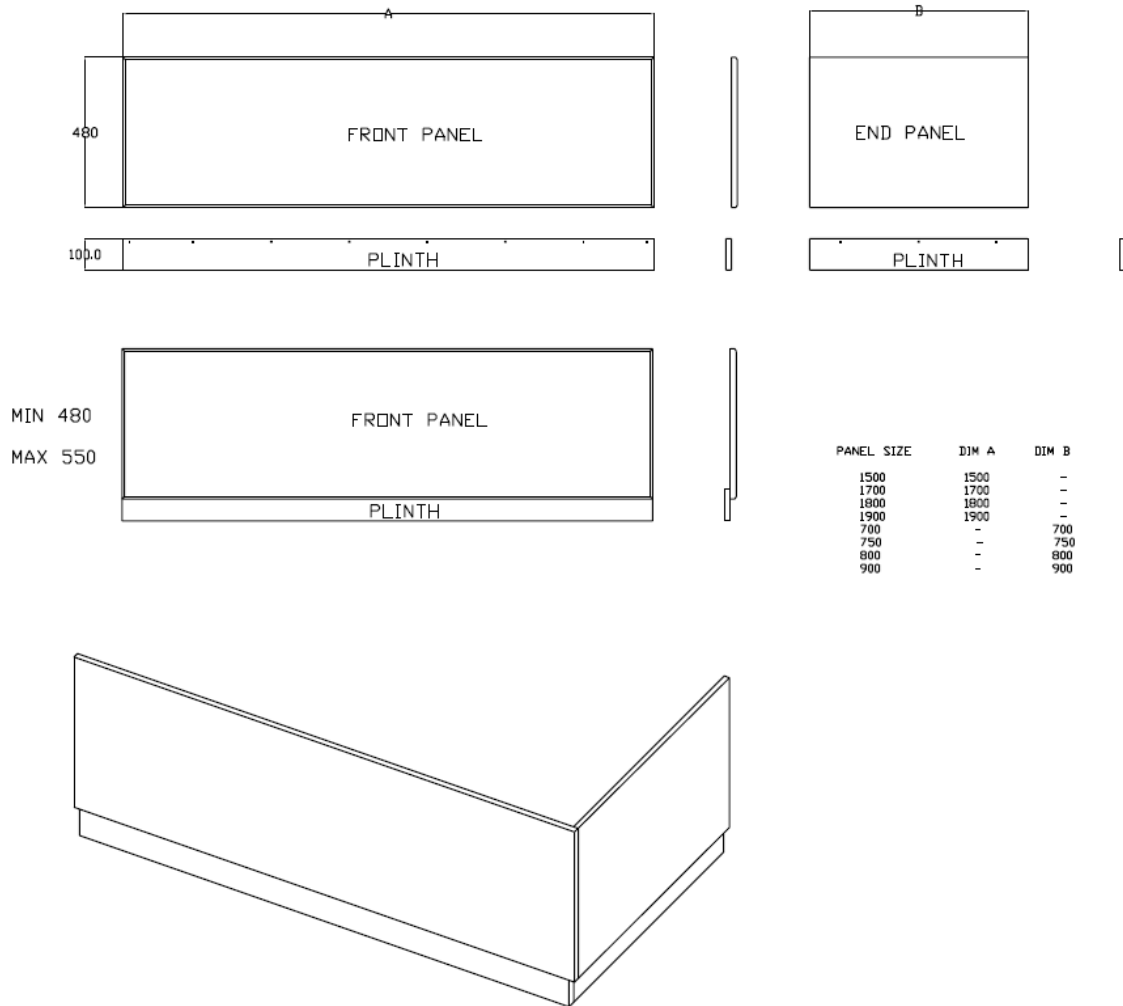

- MEASURE THE HEIGHT THAT THE PANEL NEEDS TO BE BY MEASURING FROM UNDER THE BATH RIM TO THE FLOOR.
- DRILL EQUALLY SPACED HOLES ALONG THE PLINTH AND SCREW TO THE BOTTOM OF THE MAIN PANEL AT THE DESIRED HEIGHT USING THE SCREWS PROVIDED.
- IT IS ADVISABLE TO BUILD A FRAME OR PLACE BATTENS ALONG THE FLOOR AND DOWN THE WALL SIDES TO SUPPORT THE PANEL.
- WHEN AN END PANEL IS USED IT IS NECESSARY TO TRIM THE PLINTHS SO THAT THE FRONT AND END PANELS CAN BUTT TOGETHER. ANY TRIMMING SHOULD BE DONE AT THE WALL ENDS TO ENSURE THAT THE FINISHED EDGE IS AT THE VISIBLE CORNERS.
- FRONT AND END PANELS ARE FASTENED TOGETHER USING THE SCREWS AND CORNER BRACKETS PROVIDED.
- ANY CUT OR TRIMMED EDGES MUST BE SEALED AGAINST WATER INGRESS.

## **Check out our full range of Bathroom Suites**

Bathroom Suites By Range

Cloakroom Suites

Toilets

Bathroom Sinks / Wash Basins

Bidets

Baths

## **Wide variety of toilets**

Close Coupled Toilets

Wall Hung Toilets

Back To Wall Toilets

Furniture unit toilets

## **Huge Selection of Baths**

Acrylic Baths

Steel Baths

Shower baths

Freestanding baths

Small baths

Corner baths

Whirlpool baths

## **Don't forget the important bathroom suite extras**

Bath panels

Toilet seats

**plumbworld**  
**Big brands, small prices.**