

# PRESION SHOWER HANDSET

## EASY TO INSTALL

1. Unscrew your existing shower head from the shower hose and discard along with the old washer.
2. Clean the threads on the shower hose.
3. Position the washer supplied in the connector of your shower hose and attach it to your shower head. Do not over tighten - finger tight only.

## EASY TO CLEAN

- To clean the shower head, twist the grey nozzle spray plate anti-clockwise until it can be removed (See Fig 1.). Remove the rubber gasket, taking care not to damage or lose it, and clean the shower spray plate. Any lime scale deposits blocking the nozzles should be removed by soaking the spray plate in vinegar or a proprietary lime scale remover. To reassemble, reposition the rubber gasket into the spray plate with the ridged section facing upwards. Screw the spray plate clockwise until hand tight. Do not over tighten!



## GENERAL SAFETY ADVICE

- For safety and convenience do not use with water above 65°C or with excessively high water pressure (Max 50psi/3.5 bar).
- To avoid the risk of scalding always check the water temperature before entering the shower.
- Always take care when using hot water especially with children and NEVER leave a child unattended in the bathroom.

## PRODUCT CARE

- To retain the best quality finish, clean product regularly with a soft damp cloth.
- Do not use abrasive or chemical cleaners, as these will damage the product.


## ECO WATER SAVING FEATURE

This shower head is supplied with an optional water saving device which reduces water usage by up to 50%. By reducing water volume but not water pressure, an invigorating shower can still be enjoyed. Simply insert the water saving device supplied into the handset connector during installation. This device can be removed at any time if required.

**This shower set can be used in high pressure systems but must have the flow limiter fitted above 1 bar.**

**\*Do not use the Water Saving Device with electric showers before checking the compatibility with the electric shower.**

**Ensure the device is in the correct orientation. (Fig 2)**

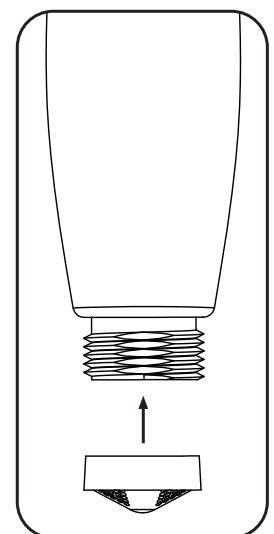

(Fig 2)

UK: Croydex, Central Way, Andover, Hants, SP10 5AW, UK.  
EU: MIL, Unit 8 Purcellsinch Ind Est, Dublin Road, Kilkenny, R95 HP71, Ireland  
Tel: +44 (0)1264 365881  
Website: [www.croydex.co.uk](http://www.croydex.co.uk)  
Email: [info@croydex.co.uk](mailto:info@croydex.co.uk)