

Combination Profile

Scribers

C149,

C157

C156 &

CRAFTPRO COMBINATION PROFILE SCRIBER REF. C149, C156 & C157

Thank you for purchasing this Trend router cutter, which should give lasting performance if used in accordance with these instructions.

The following symbols are used throughout these instructions.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions.

Refer to the instruction manual of your power tool.

This cutter must not be put into service until it has been established that the power tool to be connected to this unit is in compliance with 2006/42/EC (identified by the CE marking on the power tool).

INTENDED USE

INST/C149 v8 0

trend

routing technology

This cutter is intended to be used in a fixed head routing machine to produce a cabinet frame in wood and MDF.

Material thickness: Min. 18mm Max. 22mm

An ideal timber thickness is 20mm

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool instructions before use. PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

The attention of UK users is drawn to The Provision and Use of Work Equipment Regulations 1998, and any subsequent amendments.

Users should also read the HSE/HSC Safe Use of Woodworking Machinery Approved Code of Practice and Guidance Document and any amendments.

Users must be competent in using woodworking equipment before using our products.

Ensure working position is comfortable and component is clamped securely. Please keep children and visitors away from tools and work area. All tools have a residual risk, so must therefore be handled with caution. Attention should be made to the HSE's Safe Use of Vertical Spindle Moulding machines Information Sheet No. 18 and any revisions.

ITEMS REQUIRED

- Router with suitable collet fitted.
- Router table or overhead router stand.
- 12mm A/F spanner.
- Hand tools.
- Jig making equipment & materials.
- Workholder.

8mm Shank tools are for use with medium and heavy duty routers only.

ITEMS ENCLOSED & DESCRIPTIONS OF PARTS

- A. Arbor **x1**
- B. Nut 12mm A/F x1

C. Profile block x1

- D. Groover 6.35 kerf x1
- E. Ball bearing 22mm dia. x1
- F. Washer 1.6mm x1
- G. Shims 0.1mm x3
- H. Shims 0.05mm x3
- Instructions x1

The set is supplied in profiling mode and must be re-assembled into scribing mode for the first routing operation. Parts C & D should be assembled 90∞ to each other to reduce cutting impact.


Cutters are re-arranged on the arbor to either cut the profile or the scribe.

The ball bearing will automatically give the correct depth of cut.

When re-assembling reverse the sequence.

The joint will be fairly loose to allow for glue, so changes in tightness can be achieved by adding or removing shims G & H. This is most important after re-sharpening. Scribe Set-up

as supplied

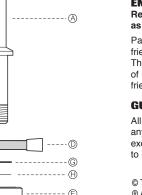





When using stacked tooling (multi-blade, block, groover etc.) on a spindle arbor, ensure that the cutting edges are staggered to each other to reduce the cutting impact.

NOTE: Diagrams show cutting edge not staggered for clarity.

ENVIRONMENTAL PROTECTION C Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmentalfriendly recycling. The product and its accessories at the end of its life should be sorted for environmentalfriendly recycling.

GUARANTEE

All Trend products are guaranteed against any defects in either workmanship or material, except products that have been damaged due to improper use or maintenance.

© Trend Machinery & Cutting Tools Ltd. 2014 E&OE ® All trademarks acknowledged

Trend Machinery & Cutting Tools Ltd.

Odhams Trading Estate St Albans Road Watford WD24 7TR England Tel: 0044(0)1923 249911 technical@trendm.co.uk www.trend-uk.com




PTO

Parts of a Panelled Door

Profile

Set-up

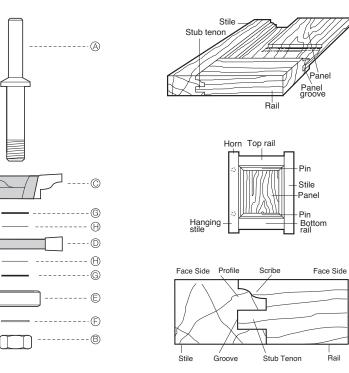



Carefully remove the protective wax from the cutter and dispose.

Insert the cutter shank into the collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of the shank length is held in the collet.


Cutting the Scribe \triangle

Material should be squared all round to ensure perfect joints are achieved. Always unplug the router from the power supply before making any adjustments and ensure that the cutter is guarded so that operator's fingers cannot contact the cutter.

On particularly hard timbers it is advisable to take shallow passes. This can be achieved by using the back fence. The final cut using the ball bearing as a guide.


When routing inverted in a table the scribe is cut with the face side of the wood facing up. A workholder should be used as the rails will be too narrow to run against a fence. This also has the advantage of making the operation safer and more accurate.

The height of the cutter should be adjusted according to the thickness of the timber between 18mm to 22mm.

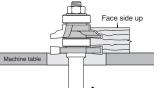

Cutting the Profile

When the scribes on the end of the rails have been cut, raise the height of the cutter so that the groover, ball bearing and cutter which is nearest the arbor shank can be used to cut the profile. The profile is cut along the wood. When routing inverted in a table the face side of the wood is facing down.

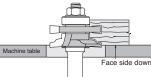

∕∖

Before using cutter, please ensure it is correctly assembled and locking nut is fully tightened.

Recommended speed for profile/scribe is 18,000 rpm.

When using the sets at minimum timber thickness the height of the top quirk may be reduced.

SPARE PARTS

Always use only Trend original spare parts and accessories.

Item	Qty	Desc.	Ref. (1 off)
Α	1	Replacement arbor 1/4" shank	33/30X1/4"
		Replacement arbor 8mm shank	33/30X8mm
		Alternative arbor 12mm shank	33/30X12mm
		Replacement arbor 1/2" shank	33/30X1/2"
В	1	Replacement arbor nut	ANUT/33/30
С	1	Profile block for C149	SP-C149A
		Profile block for C156	SP-C156A
		Profile block for C157	SP-C157A
D	1	Groover for C149, C156 & C157	SP-C149C
Е	1	Bearing 22mm dia.	BB22
	0	Spacer Set	SPACER/8
F	1	Instructions	INST/C149

MAINTENANCE ⚠

Continual satisfactory operation depends upon proper tool care and regular cleaning.

Cleaning

- Remove resin build-up regularly.
- Apply a rust protector to shanks. Do not use rust protector on ball bearing guides.

Lubrication

- Use a PTFE dry lubricant spray on tool.
- Apply a rust protector to shanks. Do not use rust protector on ball bearing guides.

Storage

Always return cutter to its packaging after use.

Safety Points

- Disconnect power tool and attachment from power supply when not in use, before servicing, when making adjustments and when changing accessories such as cutters. Ensure switch is in "off" position and cutter has stopped rotating.
- Read and understand instructions supplied with power tool, attachment and cutter.
- Current Personal Protective Equipment (PPE) for eye, ear and respiratory protection must be worn. Keep hands, hair and clothes clear of the cutter.
- Before each use check cutter is sharp and free from damage. Do not use if cutter is dull, broken or cracked or if any damage is noticeable or suspected.
- The maximum speed (nmax) marked on tool or in instructions or on packaging shall not be exceeded. Where stated, the speed range should be adhered to.
- Insert the shank into the router collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of shank length is held in collet. Ensure clamping surfaces are clean.
- Check all fixing and fastening nuts, bolts and screws on power tool, attachment and cutting tools are correctly assembled, tight and to correct torque setting before use.
- 8. Ensure all visors, guards and dust extraction is fitted.
- 9. The direction of routing must always be opposite to the cutter's direction of rotation.
- 10. Do not switch power tool on with the cutter touching the workpiece.
- 11. Trial cuts should be made in waste material before starting any project.
- Repair of tools is only allowed according to tool manufacturers instructions.
- 13. Do not take deep cuts in one pass, take shallow passes to reduce the side load applied to the cutter.
- Please see www.trend-uk.com/safety for more safety advice.



Our policy of continuous improvements mean that specifications may change without notice. Trend Machinery & Cutting Tools Ltd. cannot be held liable for any material rendered unusable, or for any form of consequential loss.